

# CLEARBROOK

## Well Water Sink Filter

SAFE, CLEAN WATER FOR KITCHEN AND BATH SINKS

For Drinking, Cleaning & Washing Dishes

### Inventory

Check to make sure you have all the correct components:

Part	Duplex	Triplex
1. White Filter Housings	2	3
2. Primary Filter	1	1
3. Pre-Filter	1	1
4. Specialty Filter	0	1
5. Inlet DC Hose	1	1
6. Outlet DC Hose	1	1
7. 1/4" Bras NPT Close Nipple	1	1
8. Bracket	1	1
9. Bracket Screws	4	8
10. Housing Wrench	1	1



### Installation Instructions

You do not need a plumber to install your Well Water Sink. You can install the system under your sink on the interior wall of the cabinet.

1. Under the sink, turn the cold water supply valve to the "off" position.
2. Disconnect the existing fitting at cold water supply valve that leads to faucet (not at the faucet).
3. Unscrew the Filter Housings from their lids
4. Secure the Bracket, with lids attached, to the wall with screws.
5. Place the Pre-Filter in a filter housing and secure it to the lid closest to the inlet side of the cold water supply. Tighten it using the Housing Wrench, turning it clockwise.
6. If you are using a Specialty Filter (Triplex System), place the Specialty Filter in the Filter Housing and secure it to the lid in the middle using the Housing Wrench and turning it clockwise.
7. Place the Primary Filter in a filter housing and secure it to the lid closest to the outlet side of the cold water supply using the Housing Wrench and turning it clockwise.
8. Connect the Inlet Hose (the swivel end) to the cold water supply valve.
9. Connect the outlet hose (the swivel end with brass fitting) to your existing hose that leads to faucet, and connect the male threaded end to outlet side of the filter housing.
10. Slowly turn the water supply back on.
11. Slowly open the shut off valve
12. Turn on the cold water faucet and let the water run for five minutes to purge the filters.

### Maintenance

If the water pressure drops or stops flowing, it could be because your Pre-filter is clogged. Here is how to clean or replace the Pre-filter. (The same instructions apply for replacing the Primary or Specialty Filter)

1. Turn off the water supply
2. Press on the red Pressure Release Button on the top of the filter housing to release the water pressure.
3. Slide the Housing Wrench up around the Pre-filter Housing until it fits snugly, and then turn it counter-clockwise to unscrew the housing from the lid.
4. Pour the water out of the filter housing into the sink, and then remove the Pre-filter from the housing.
5. If you have a 20 or 50 micron Pre-filter, you can clean it by spraying it with a sink hose or taking it outside and spraying it off with a garden hose.
6. If you have a 1 or 5 micron Pre-filter, you will need to replace it with a new filter, as they are not re-useable.

### Additional Information

- The primary filter should be removed and discarded not later than 3 years from date of installation.
- This filter should be used in conjunction with cold water only.
- It is a violation of federal law to use this product in a manner inconsistent with its labeling.